

Pad Prep Instructions


Preparation for your shed is an important procedure. First, you will need to prepare a level area to place the shed or garage. Sheds Unlimited recommends the following:

1. Build a 4"x4", 4"x6" or 6"x6" pressure treated perimeter
2. The shed pad should be at least one foot longer and one foot wider than the actual size of the shed you have purchased or intend to purchase.
3. Fill the area inside the outer frame with 4-6 inches of 3/4 inch stone
4. Please insure that the pad is level and square

Please Note: If you plan to place your building on a concrete pad please contact a Sheds Unlimited sales representative for instructions - 717-442-3281 - shedsunlimited@gmail.com



Shed Skid Placement

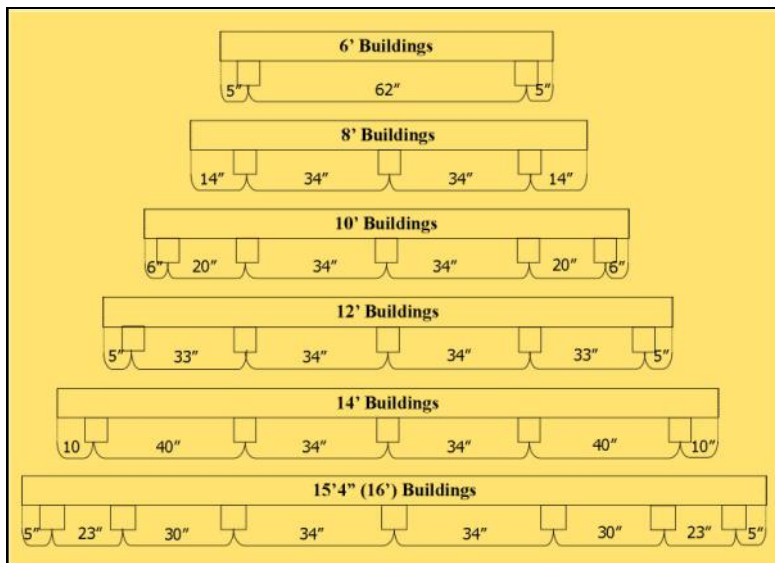

Building a Pad for Anchoring

At times local townships will require the homeowner to anchor the shed to the ground. Sheds Unlimited offers anchoring kits which can either be installed by the Sheds Unlimited driver or the homeowner without any special changes in the pad design. However, If the local authority requires the skids to be anchored to concrete, then the homeowner should use the "Skid Placement" Plan that coincides with the shed which has been purchased. Anchors should be placed into the concrete following the measurements shown.

On Concrete Blocks:

If the customer wishes to simply install concrete blocks for the shed to lay on (we do not recommend this as the best option), then follow the 4x4 skid placement plan pictured on the left. Please note that this is the Gable end of the building and the 4x4 will run the length of the shed. Our delivery crew will place the shed just where you want it.

Please feel free to contact us at: 717-442-3281 - shedsunlimited@gmail.com